



Canon Powershot SX500 IS Battery Replacement

How to replace a dead battery in order to bring power back to the camera.

Written By: Jody Wilkerson



INTRODUCTION

The user will need a replacement battery or fully charged battery to insert into the camera. No tools required.

Step 1 — Battery



- Rotate the camera to expose the underside of the camera.

Step 2



- Slide the rounded rectangle tab to the left to release the battery cover.

Step 3



- Push the small orange tab forward to release the battery (Battery is ready for removal).

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 02:49:18 AM.